

ASSEMBLY AND INSTRUCTION MANUAL

MODEL OD0919 THEKLA

© 2019 KURT BEIER & KATI QUINGER



Rotation function (360°)
and individual
back adjustment




Filigree base frame,
metal, powder-coated
fine structure in black matt




Quality outdoor solid wood
in different wood variants


Alignment of base plate:

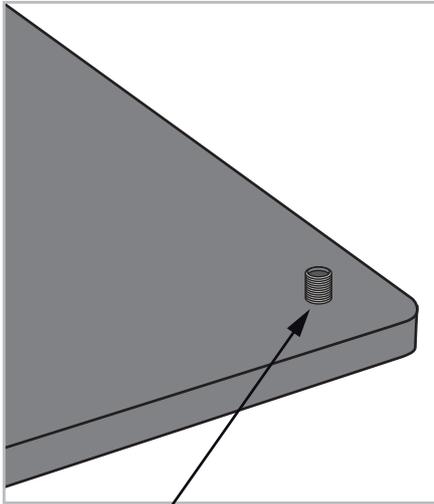


Delivery state

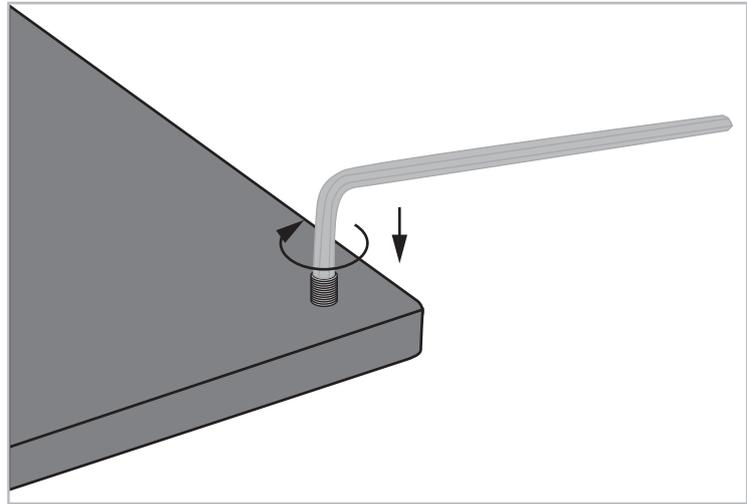


Screw in the adjustable foot flush-mounted from above with the supplied allen key.

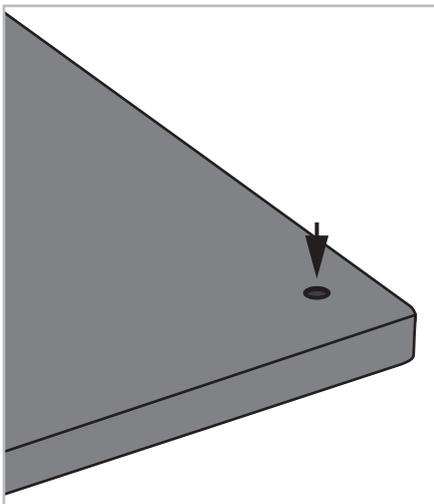

Flush-mounted

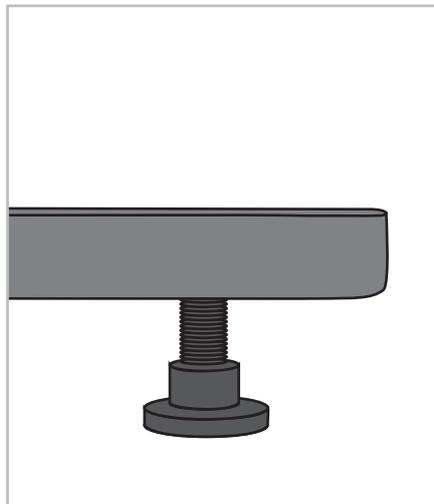

Side view of base plate / adjustable foot

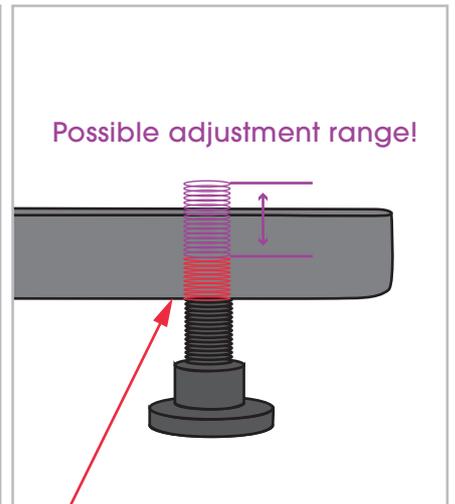


Possible adjustment range!
Attention! The adjustable foot must not unscrewed downwards!

Rust protection measure, thread: Should rust form on the threads of the adjustable foot after some time in the outdoor area, please wipe it off with a cloth and a drop of oil. Bullfrog also recommends that the thread be kept in good working order with a drop of oil once a year.

Use of back function:


Adjustment of back slant:

1. To adjust the desired position grip the back from the outside and pull it carefully into your direction.

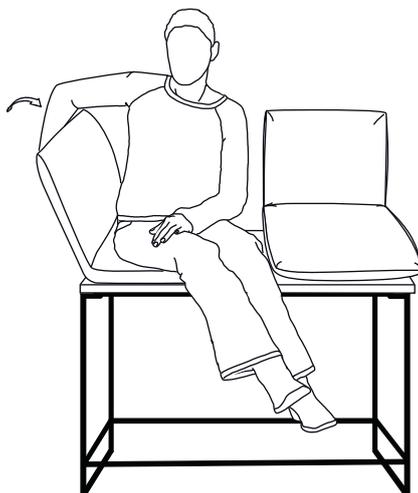

2. To obtain zero position pull the back carefully beyond the top position into your direction and fold down into zero position.

3. From zero position you can easily snap the back into desired position.

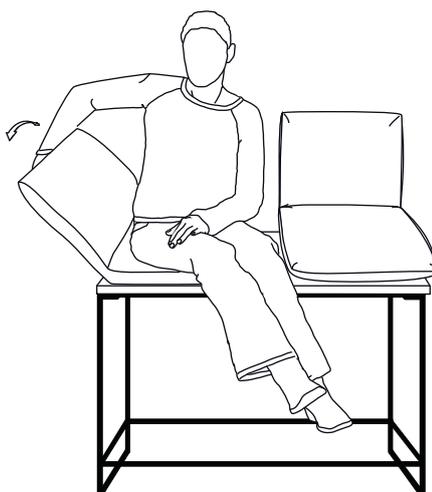

ATTENTION! DON'T SIT ON BACK!