

ASSEMBLY AND INSTRUCTION MANUAL

MODEL 6027 LOFT

© 2019 KURT BEIER & KATI QUINGER



TIMELESS CUBIC DESIGN



FABRIC: DECORATIVE
OVERCAST SEAM
(LEATHER: RAW EDGED)



VARIABLE INSERT DEPTH
FOR SLATTED FRAME

Assembly manual - Model 6027

Information

ATTENTION! To ensure secure assembly, please observe the individual steps of instruction!

The furniture should always be mounted in pairs (2 persons)!

Contents

2 side panels (semi-product) with 4 already mounted corner connectors

1 foot part (semi-product)

1 headboard (completely upholstered)

20 hexagon socket countersunk screws

1 centre support rail with angle connectors

4 slatted frame angles for corner connectors

2 slatted frame angles for side panels

9 felt gliders

1 Allen key, size: 4 mm

Wooden feet 7 cm:

3 height-adjustable plastic supporting feet (44-73 mm, 89-125 mm, 120-235 mm)


4 plastic glides 70 mm

4 Screw-in wooden feet

Wooden feet 13 cm:

3 height-adjustable plastic supporting feet (120-235 mm)

4 Screw-in wooden feet

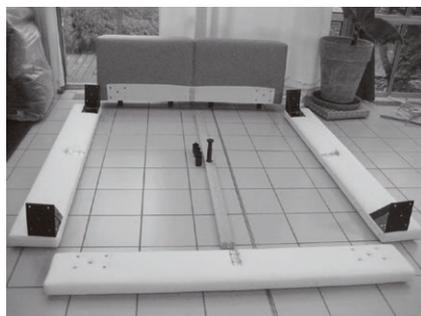


1. Unpack the individual parts of the bed, place them as shown in picture and check the delivered package contents for completeness.



2. Screw in one wooden foot per corner connector.








3. Screw together the side panels with headboard and then the foot part with side panels. Subsequently mount the centre support rail at desired height at headboard and foot part. Turn the height-adjustable supporting foot at the inside to adjust the individual desired height. If you like to insert the mattress deeper, just hang the slatted frame angle at lower position and adjust the height of supporting foot again. The insert depth varies around 7 cm.

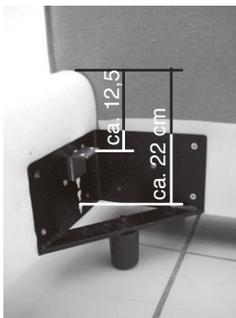






13 cm wooden feet

ATTENTION: The mounting of angles for a slatted frame height is not equal for every angle. The single angles are positioned at another height than the angles of the centre support rail. The supporting foot height must be adjusted individually by turning.

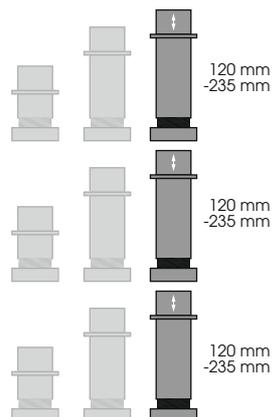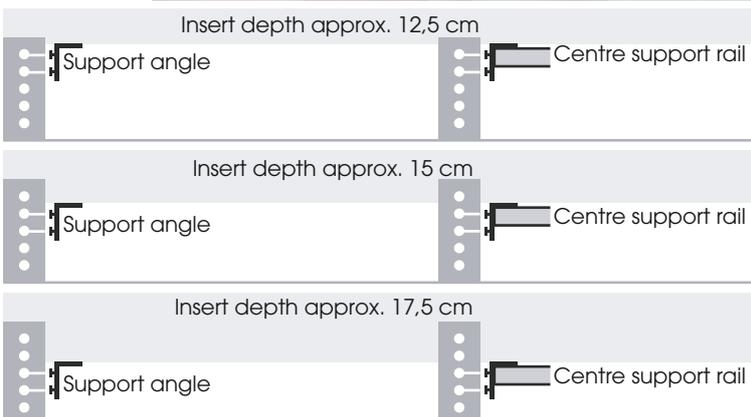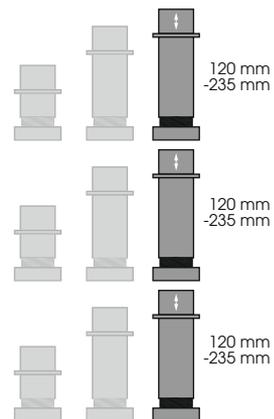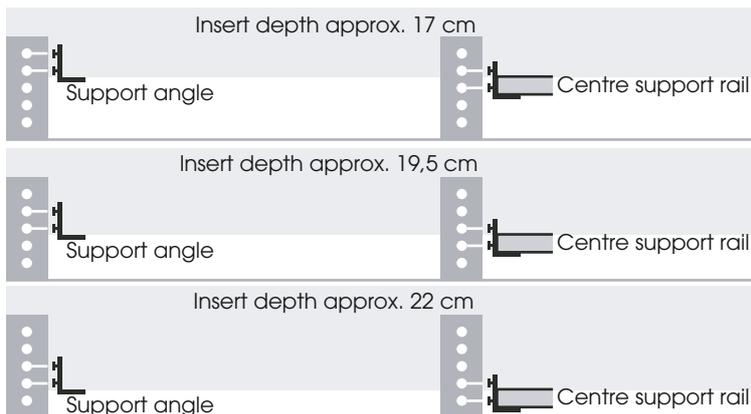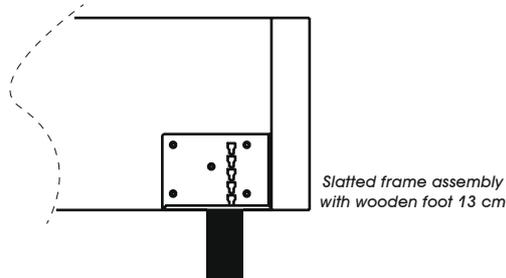

7 cm wooden feet

ATTENTION: The mounting of angles for a slatted frame height is not equal for every angle. The single angles are positioned at another height than the angles of the centre support rail. The supporting foot height must be adjusted individually by turning.

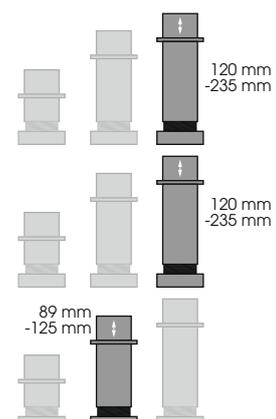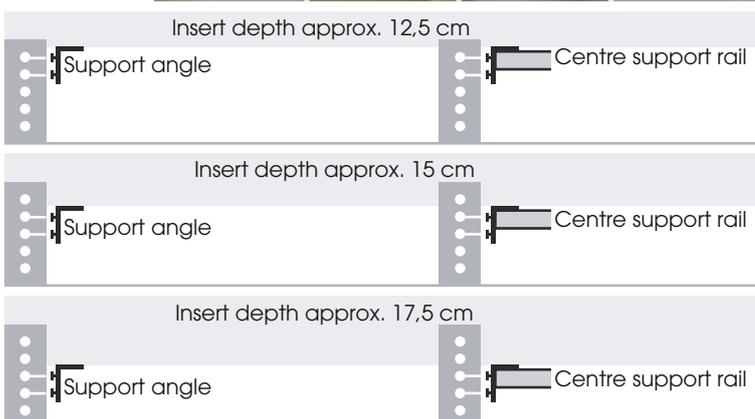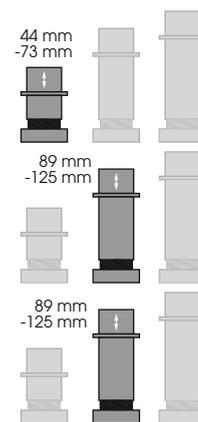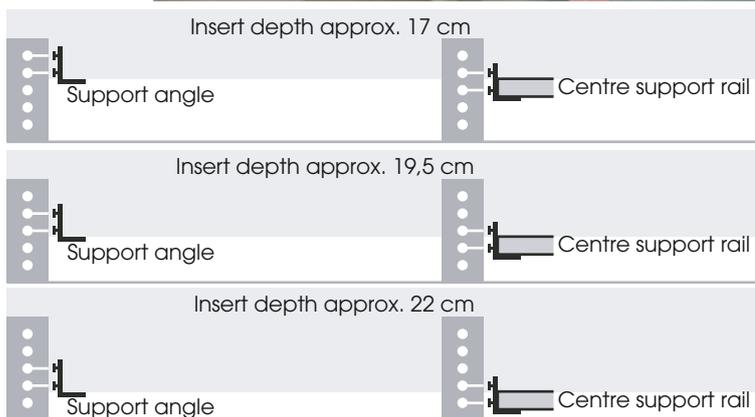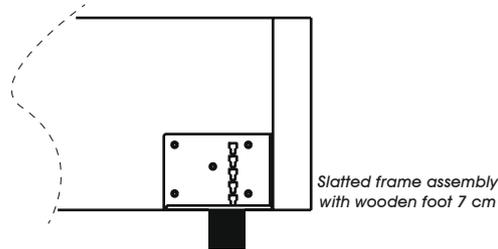

Instruction for covering of the corpus



1. Place the cover for corpus around the Bed. Look for the 2 corner parts with the connector seam. Start at one corner to place the seam of cover on a mitre.



2. When the complete cover is placed correctly, remove the soft protective strip from velcro. To fix the cover, press the cover at corpus, starting from the corners and the inside of bed. Latterly fix the cover at lower edge. The velcro adheres at material of corpus.



Covered corpus!